



facilities services



Vacancy Sensor Light Switch

Press to turn light on – press again to turn off. Lights will go out automatically after 20 minutes if no movement is sensed.



Central lighting control override

Top small buttons control local zones. Press button to turn lights on – Red LED will illuminate – press again to turn off. Press large button on bottom to turn all zones off, press again and those zones that were on will be restored.

Lights will automatically return to central building schedule control after 2 hours.



Room thermostat control

Room temperature is displayed in the LCD display.

Pressing the up or down arrows will increase or decrease temperature set point. The new set point will blink several times in the LCD display to confirm the new setting and return to the room temperature display.

Press the bottom button to override the system on for after-hours temperature control. The LED will illuminate to confirm occupancy and remain in effect for 2 hours before returning to scheduled control.

**Any questions, please call Facilities Customer Service Center
tel: 415/476-2021**